



We recommend measuring your dog before buying, please don't guess! Our sizes go on actual measurements rather than a breed guide as the key to a good, comfy fit is getting the right size dog harness for your dog. To measure you will need a soft tape measure (not a steel one) and it is best to have your dog standing up squarely.

Feel free to contact us with any question, we are glad to help you!

CHEST GIRTH

The chest measurement, also known as 'girth' is taking the tape measure right under your dog's body at the fullest point in a complete circle about 2 to 3 fingers behind your dog's front legs. This chest/girth strap is adjustable! For best fit choose the size according to this size. If the measurement is close to the end of the size range, go up to the larger size.

Size	Chest Girth	Front Chest	Back Length	Webbing Width
XXS	30-40cm	25-30cm	18-22cm	15mm
XS	40-50cm	30-35cm	18-26cm	15/20mm
S	50-60cm	35-45cm	24-30cm	20/25mm
M	60-70cm	45-55cm	28-35cm	20/25/30mm
L	70-80cm	50-60cm	32-40cm	25/30/40mm
XL	80-90cm	55-65cm	38-45cm	30/40mm
XXL	90-100cm	60-70cm	42-50cm	40mm
XXXL	100-120cm	60-75cm	42-60cm	40mm

FRONT CHEST

First find the top of your dog's breast bone. To measure the front chest, measure from just behind the front leg (the 'green' strap) around the front of the dog to just behind the other front leg (again the 'green' strap). Please keep in mind, Norwegian harnesses don't have an adjustable front chest strap, therefore don't measure too tight!

BACK LENGTH

This measurement is needed in order to determine the height of the front chest strap. Measure from the 'red' front chest strap, over the shoulders to the 'red' front chest strap on the other side.

BACK length must always be less than FRONT CHEST length! A good rule of thumb: back length is about half size of chest girth.

